



S3100A-B选配卡 (模拟量输出, 继电器输出扩展选配卡) 使用说明书

1、扩展选配卡：板形及端子位置示意图

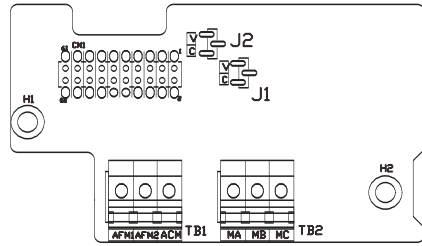

2、扩展选配卡：安装示意图

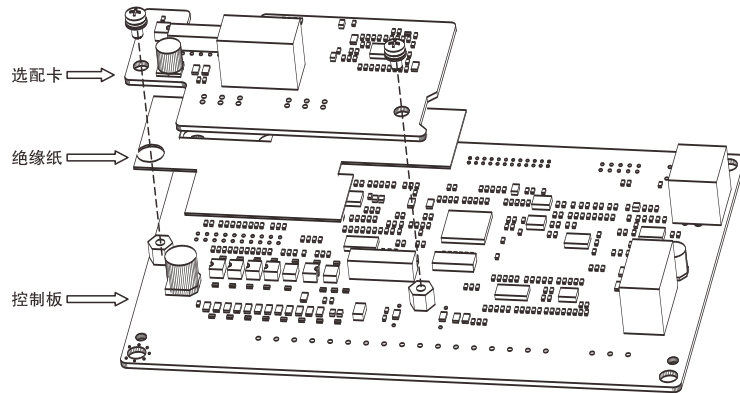


3、端子功能说明


端子位号	端子名称	功能说明	对应参数
TB1	AFM1-ACM模拟量输出1 (由跳线J1选择电压或电流输出)	1. 输出电压规格: DC0~+10V 2. 输出电流规格: 0~20mA 3. AFM1和控制板上AFM为同一信号源	06-07
	AFM2-ACM模拟量输出2 (由跳线J2选择电压或电流输出)	1. 输出电压规格: DC0~+10V 2. 输出电流规格: 0~20mA	06-08
TB2	MA-MB-MC继电器触点输出	1. 常开MA-MC, 常闭MB-MC 2. 触点: AC250V, 3A DC30V, 3A	06-02

S3100A-B Optional Card (Analog Output, Relay Output Expansion Optional Card) Instruction Manual

1. Extended Optional Card: Schematic Diagram of Board Shape and Terminal Position

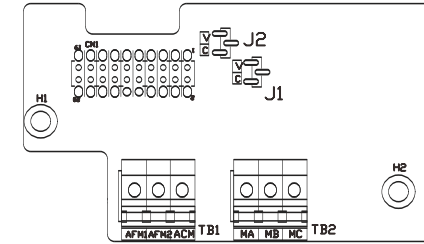

2. Expansion Option Card: Installation Diagram

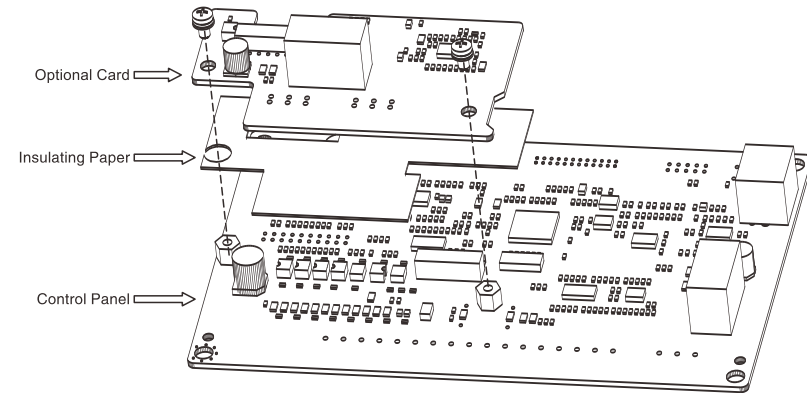

3. Description of Terminal Function

Terminal NO.	Terminal Name	Function	Parameter
TB1	AFM1-ACM analog output 1 (Select voltage or current output by jumper J1)	1. Output voltage specification: DC0~+10V 2. Output current specification: 0~20mA 3. AFM1 and AFM on the control board are the same signal source	06-07
	AFM2-ACM analog output 2 (Select voltage or current output by jumper J2)	1. Output voltage specification: DC0~+10V 2. Output current specification: 0~20mA	06-08
TB2	Relay contact output	1. Normally open MA-MC, normally closed MB-MC 2. Contact: AC250V, 3A DC30V, 3A	06-02



生产总部
泉州市鲤城区江南高新园区紫新路3号
电话: 0595-24678267
传真: 0595-24678203

服务网络
客服电话: 400-6161-619
网址: www.savch.net

已获资质
ISO9001体系认证及CE产品认证
520031004200 V1.0 2022-06-20

三善微信服务号 版权所有, 侵权必究; 如有改动, 恕不另行通知。



Quanzhou Factory
Address: 3# Zixin Road, Jiangnan Hi-Tech Industrial Park,
Quanzhou, Fujian, China
Tel: +86 595 24678267 Fax: +86 595 24678203

Service Network
Website: www.savch.net

Qualification

Received ISO9001 and CE recognition
All rights reserved. Subject to change without further notice.