



HCA-A ETIO-AOMC1 选配卡 (模拟量输出, 继电器输出扩展选配卡) 使用说明书

1、扩展选配卡：板形及端子位置示意图

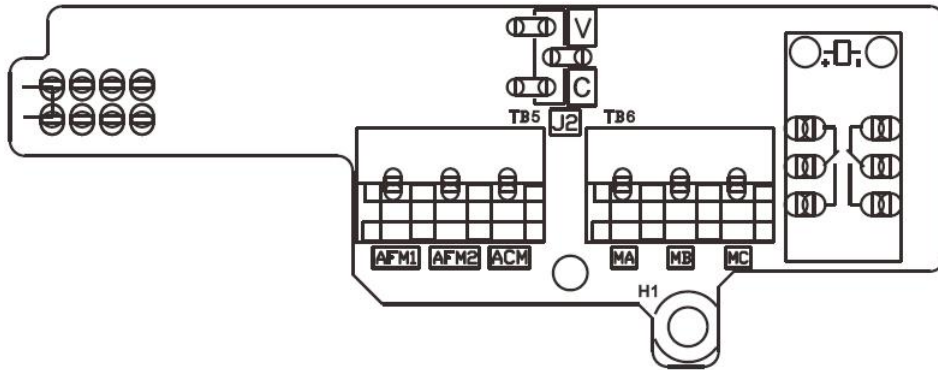

2、扩展选配卡：安装示意图

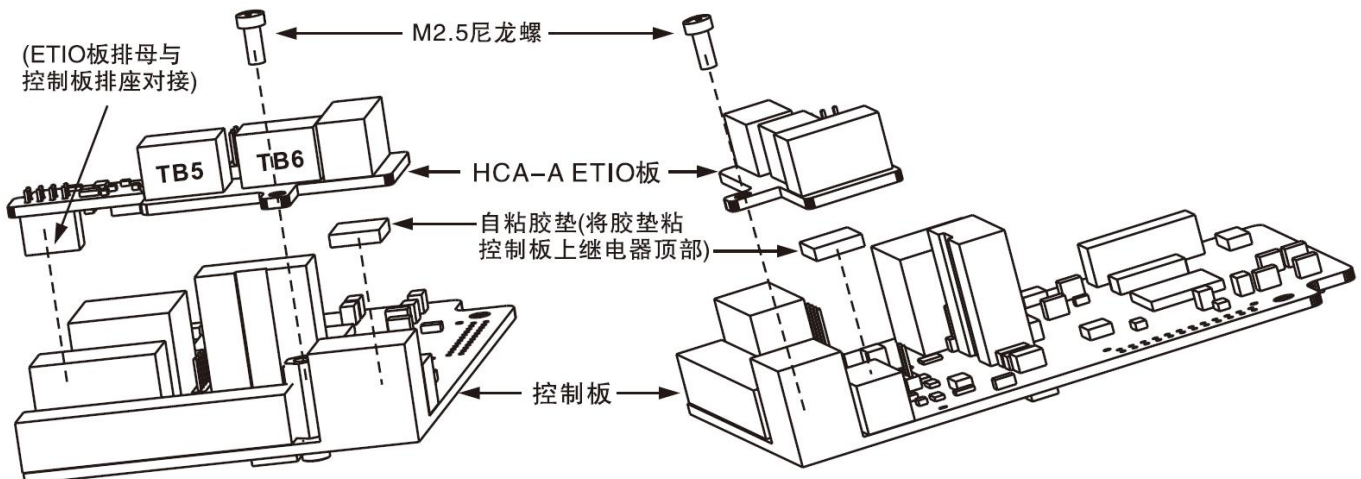

3、端子功能说明

端子位号	端子名称	功能说明	对应参数
TB5	AFM1-ACM 模拟量输出 1	1.输出电流规格: 0~20mA 2.AFM1 和控制板上 AFM 为同一信号源	06-07
	AFM2-ACM 模拟量输出 2 (由跳线 J2 选择电压或电流输出)	1.输出电压规格: DC0~+10V 2.输出电流规格: 0~20mA	06-08
TB6	MA-MB-MC 继电器触点输出	1.常开 MA-MC, 常闭 MB-MC 2.触点: AC125V, 0.5A DC30V, 2A	06-02

备注: AFM 输出 4~20mA 的参数设定方法: 06-10=06-12=20.0(%), 06-11=06-13=0.80。



三基微信服务号

生产总部

泉州市鲤城区江南高新园区紫新路 3 号

电话: 0595-24678267

传真: 0595-24678203

服务网络

客服电话: 400-6161-619

网址: www.savch.net

已获资质


ISO9001 体系认证及 CE 产品认证

520031004200 V1.0 2024-04-15


版权所有, 侵权必究! 如有改动, 恕不另行通知!

HCA-A ETIO-AOMC1 Optional Card (Analog Output, Relay Output Expansion Optional Card) Instruction Manual

1. Extended Optional Card: Schematic Diagram of Board Shape and Terminal Position

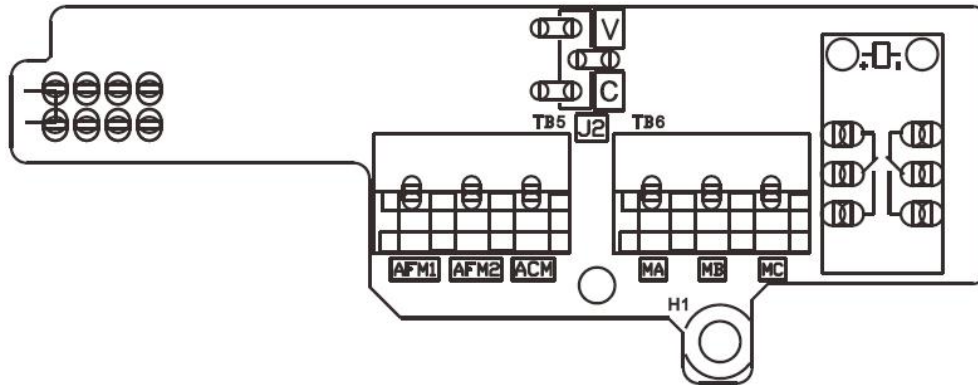

2. Expansion Option Card: Installation Diagram

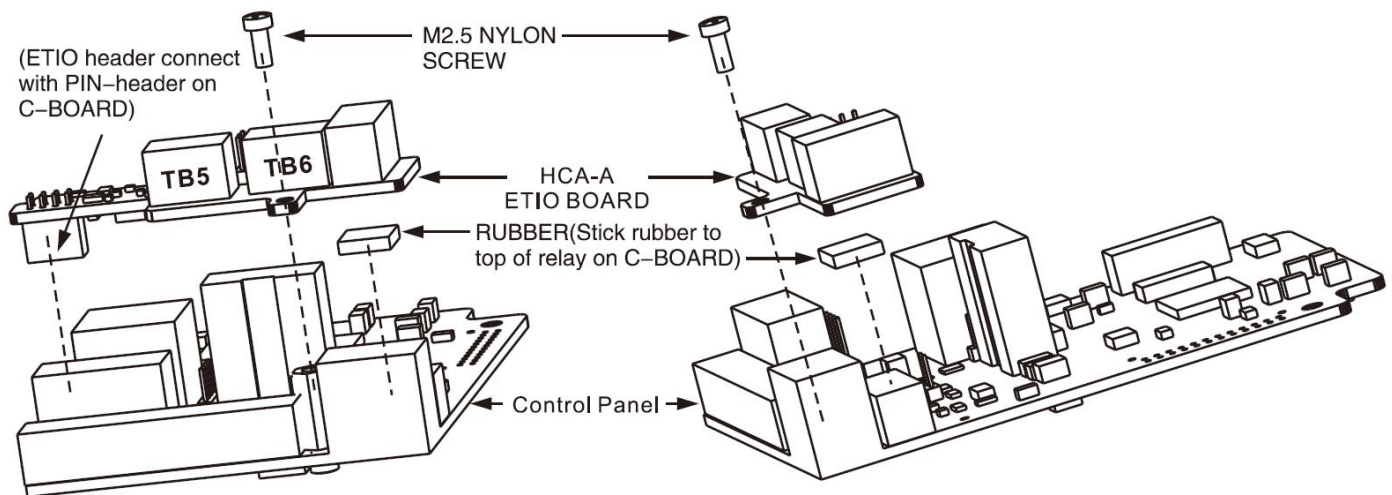

3. Description of Terminal Function

Terminal NO.	Terminal name	Function	Parameter
TB5	AFM1-ACM analog output 1	1. Output current specification: 0~20mA 2. AFM1 and AFM on the control board are the same signal source	06-07
	AFM2-ACM analog output 2 (Select voltage or current output by jumper J2)	1. Output voltage specification: DC0~+10V 2. Output current specification: 0~20mA	06-08
TB6	MA-MB-MC Relay contact output	1. Normally open MA-MC, normally closed MB-MC 2. Contact: AC125V, 0.5A DC30V, 2A	06-02

NOTE: AFM output 4~20mA: 06-10=06-12=20.0(%), 06-11=06-13=0.80



Quanzhou Factory

Address: 3# Zixin Road, Jiangan Hi-Tech Industrial Park, Quanzhou, Fujian, China

Tel: 0595-24678267

Fax: 0595-24678203

All rights reserved. Subject to change without further notice.

Service Network

Website: www.savch.net

Qualification

Received ISO9001 and CE recognition